

How can I get a free 16-node license for Industrial HiVision?

- 2022-01-10 - Industrial HiVision

You will need to register at <http://www.hivision.de/English/license/index.phtml> for the 16 nodes free of charge license. You will need your hardware key to generate a valid license. The hardware key can be retrieved via the user interface of Industrial HiVision: "Help --> About --> License"