

Base de conocimiento > Products > Why does the system uptime wraps after 497 days

## Why does the system uptime wraps after 497 days - 2024-09-19 - Products

The system uptime is a 32 bit counter which has a maximim value of 2<sup>32</sup> or 4,294,967,296. When the counter reaches this value (after 497 days, 2 hours, 27 minutes, and 53 seconds, or approximately 16 months), it wraps back around to zero and continues to increment.