



### Expert WLAN settings - WLAN interface 1

Beaconing | Roaming

The roaming settings are relevant only in client mode. They control if and when the client will change its access point, if it can reach more than one access point.

- Enable soft roaming
- Prioritized Channel Scan

Thresholds

|                          |      |
|--------------------------|------|
| Beacon miss threshold:   | 4    |
| Roaming threshold:       | % 15 |
| No roaming threshold:    | % 45 |
| Force roaming threshold: | % 12 |
| Connect threshold:       | % 0  |
| Connect hold threshold:  | % 0  |

Signal level

|                                 |   |
|---------------------------------|---|
| Min. connect signal level:      | 0 |
| Min. connect hold signal level: | 0 |

Block time: seconds 0

OK Cancel