

What is the URL to access the OPC UA server of Industrial HiVision 6.0 or higher?

- 2018-02-21 - Industrial HiVision

Industrial HiVision 6.0:

URL: `opc.tcp://<IP-ADDRESS>:11161/OPCUA/HiVisionUaServer`

Industrial HiVision 7.0:

Industrial HiVision 07.0.00; 07.0.01; 07.0.02:

URL: `opc.tcp://<IP-ADDRESS>:11167/OPCUA/HiVisionUaServer`

Industrial HiVision 07.0.03 or later:

URL: `opc.tcp://<IP-ADDRESS>:11168/OPCUA/HiVisionUaServer`

Industrial HiVision 7.1:

URL: `opc.tcp://<IP-ADDRESS>:11175/OPCUA/HiVisionUaServer`