

Knowledge base > Products > Industrial HiVision > How can I get a free 16-node license for Industrial HiVision?

---

## How can I get a free 16-node license for Industrial HiVision?

- 2023-06-22 - Industrial HiVision

You will need to register at <https://hivision.de/license/> for the 16 nodes free of charge license. You will need your hardware key to generate a valid license. The hardware key can be retrieved via the user interface of Industrial HiVision: "Help --> About --> License"