

## Configuration File Compare


- 2018-02-21 - Industrial HiVision

As of v6.0 IHV is able to monitor the configuration file of a device (Platform4, Platform5, EAGLE, BAT and GarrettCom).

Therefore the clear text configuration (script or xml) is stored in a property. The standard polling/status configuration can be used for comparing the current configuration to the reference config.


This lesson describes how to set a reference configuration and in case of configuration changes how you can display the differences.

### Configuration File Properties

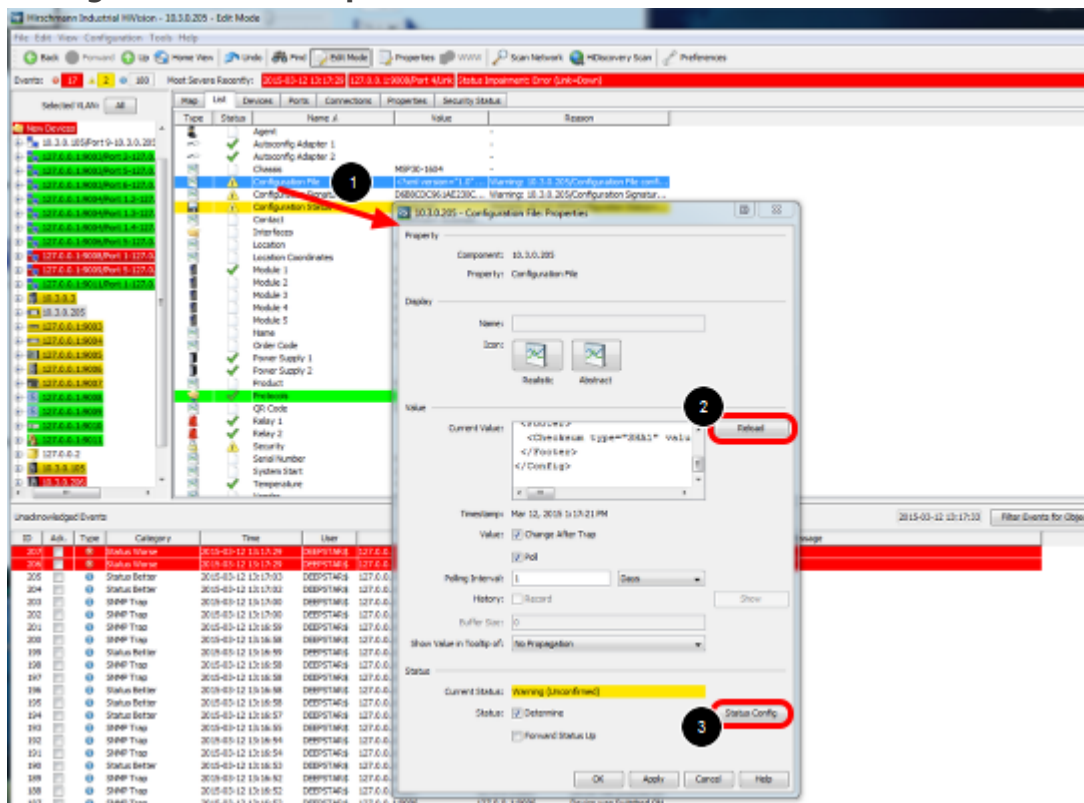

1. double click on the property Configuration File
2. press reload to download the current configuration from the device
3. open the status configuration

### Configuration File - Status Config

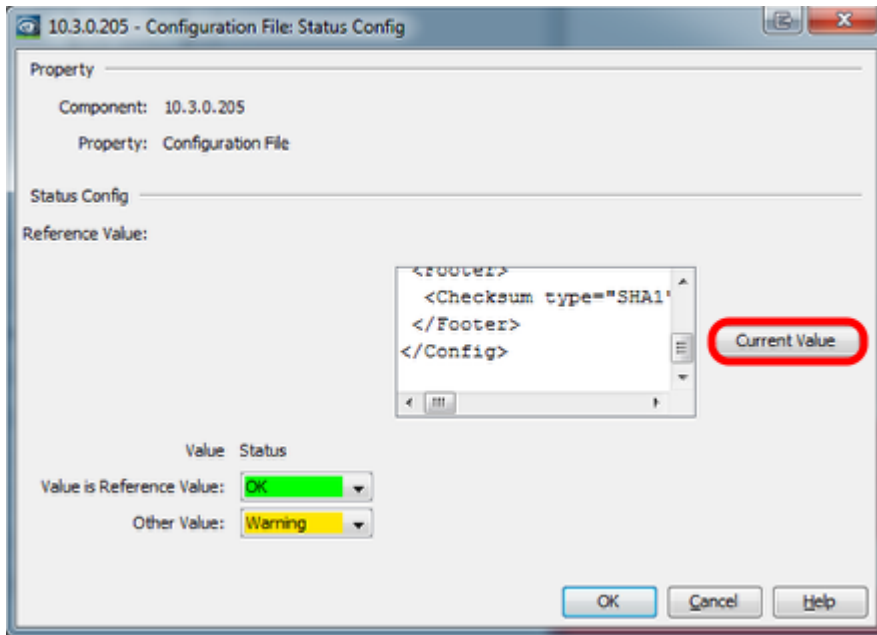

In the status configuration dialog you can set the current value as reference value.

## Change the configuration

Hirschmann Industrial HiView - 10.3.0.205 - Edit Mode

File Edit View Configuration Tools Help

Back Forward Up Home View Links Print Edit Mode Properties WWW Scan Network HiDiscovery Scan Preferences

Events: 0 2 1 187 Most Severe Recently: 2015-03-12 13:18:06 127.0.0.1:9000/Port 40 In Load Status Dependent Error (In Load) - 20.0, Current Value: 190.0

Type	Status	Name #	Value	Reason
Agent				
Autocfg Adapter 1				
Autocfg Adapter 2				
Chassis			HSP30-1804	
Configuration File			SHA1 Version: 1.0	
Configuration Signature			D68BCDC941NE230C...	Warning: 10.3.0.205/Configuration Signatur...
Configuration Status			Not Saved	Warning: 10.3.0.205/Configuration Status...
Contact			Hirschmann Automate...	
Interfaces				
Location Coordinates			Hirschmann	
Module 1			HSP40-0711 071529...	
Module 2			HSP40-0711 071529...	
Module 3			HSP40-0711 071529...	
Module 4			HSP40-0711 071529...	
Module 5			HSP40-0711 071529...	
Name			HSP e65559P093C	
Order Code			HSP30-1804HSC294...	
Power Supply 1				
Power Supply 2				
Product			HSP	
Release				
QR Code			942075999 HSP30-...	
Role 1				
Role 2				
Security				
Serial Number			94207599901001590	
System Start			2015-02-27 11:47:55	
Temperature			43	
Updater			Hirschmann	

10.3.0.205 - Location Properties

Property  
Component: 10.3.0.205  
Property: Location

Deploy  
Name:   
Icon:  Realistic  Abstract

Value  
Current Value: Hirschmann PECE

Timestamp: Mar 12, 2015 12:17:43 PM  
Value:  Change After Trap  
 Fill  
Polling Interval: 1 Minutes  
History:  Record   
Buffer Size: 100  
Show Value in Tooltip of: Device


Status  
Current Status: No Status  
Status:  Determine   
 Forward Status Up

4

Change the device configuration e.g. the device location:

1. double click the property location
2. change the current value
3. press write


4. close the dialog with ok

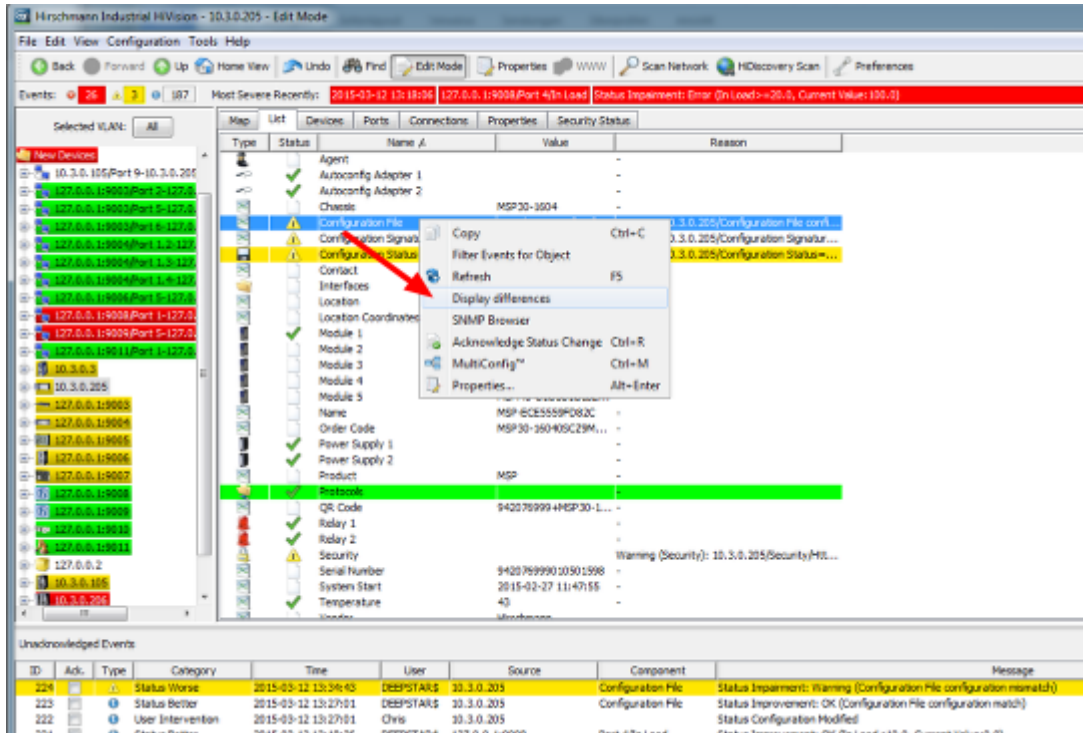

Reload the Configuration File property if the change is not already detected.


Open the context menu (right click on Configuration File) and select Display Differences

## Display Differences

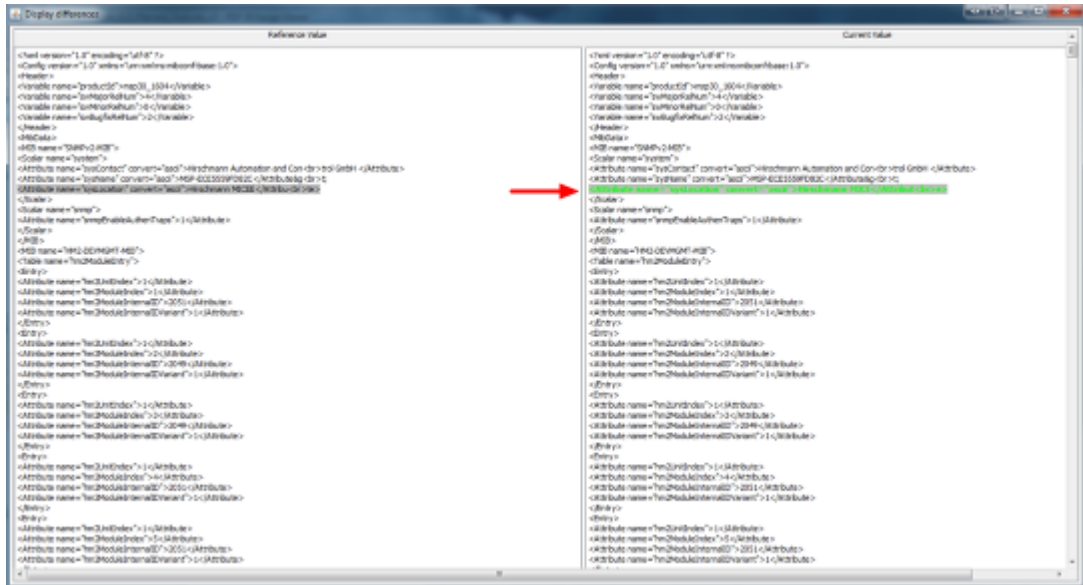

A new window will open which highlights the differences between the current and the reference config.

## Set reference value per MultiConfig

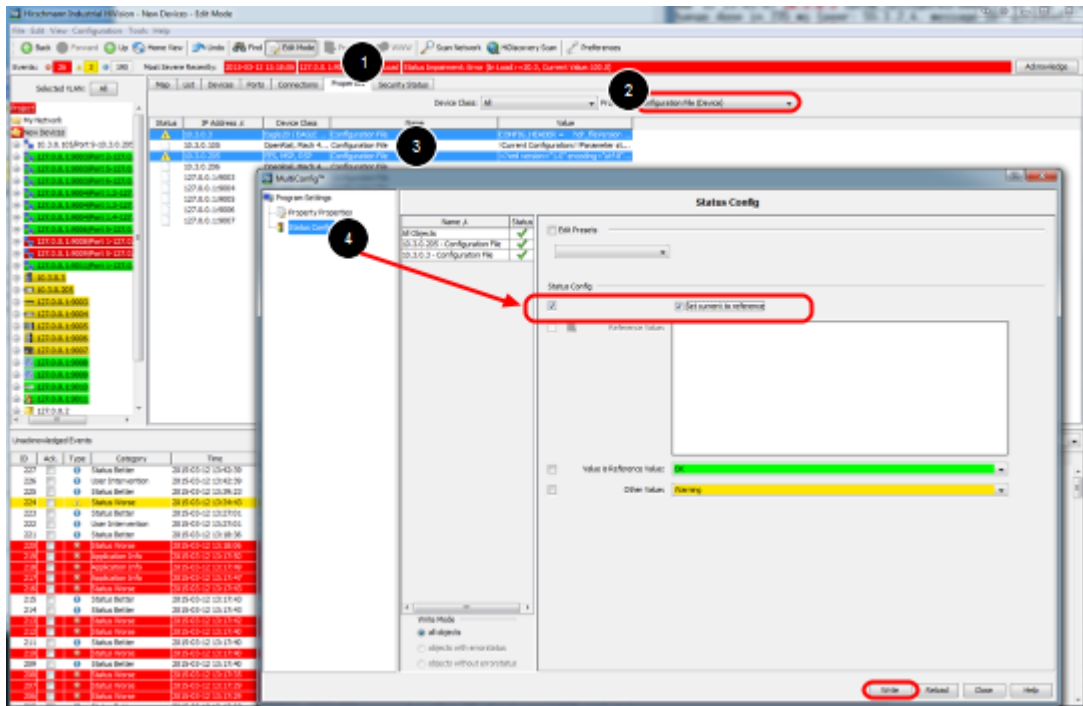

1. To set the current value as reference value on multiple devices navigate to the Properties tab.
2. Select the property 'Configuration File (Device)'
3. Highlight devices and select Multiconfig from the context menu (right click)
4. Go to Status Config and tick 'Set current to reference'