


Kennisbank > Products > Industrial HiVision > How to add an Industrial HiVision license

How to add an Industrial HiVision license

- 2022-01-10 - Industrial HiVision

This howto describes the procedure to add a license in Industrial HiVision (IHV). Prerequisites: Installed Industrial HiVision, eMail with IHV license code

Open IHV Preferences

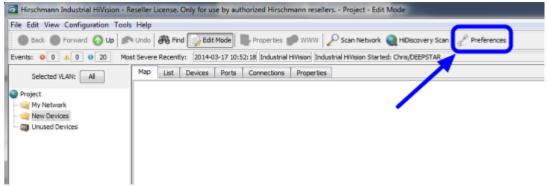


Start Industrial HiVision and open the 'Prefences' dialog (Configuration - Preferences)

eMail including License Key



Copy the license code from the received eMail.

License Dialog - New Entry

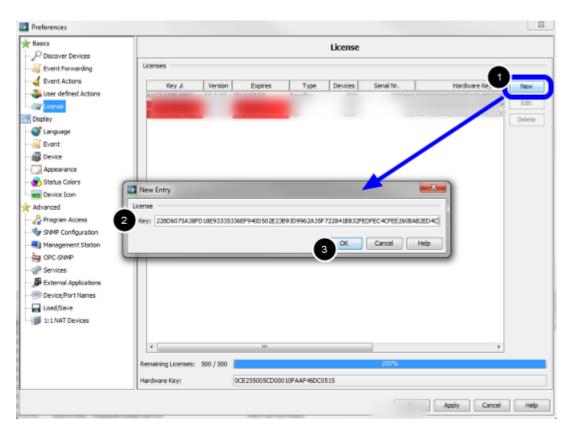

- 1. Click 'New' to add an entry
- 2. Paste the license key from the received license eMail
- 3. Close the pop-up window with 'Ok'

Preferences x Basics License P Discover Devices Licenses Sector Forwarding 🤞 Event Actions Hardware Key Key A Version Expires Type Devices 61C7 A58E 8883 ... 05.0.00 2014-07-02 Reseller 500 Serial Nr. New Ser defined Actions Edit 1000 🚑 Licens Ful Ful 1000 Display Delete 💕 Language Event Device Appearance 😵 Status Colors Device Icon Advanced 🖧 Program Access SNMP Configuration Management Station by OPC-SMMP P Services External Applications Device/Port Names Load/Save 1:1 NAT Devices - F Remaining Licenses: 500 / 500 Hardware Key: 0CE2550 OK Apply Cancel Help

License Dialog - check for valid license

Valid licenses are shown without background color, red entries are expired. Below you can see the total number and remaining licenses.

=Ve	ent	t lo	g mess	age					
hadm	nuledge	ed Event	3						
nədon ID	Ack.	d Event	s Category	Time	User	Source	Component		Messag
			-	Time 2014-03-1714-07-15	User	Source Industrial Hilliston	Component	Preferences Modified by User	Messag
D			Category				Component	Preferences Modified by User Industrial HWsion is licensed	Messag

After closing the preferences dialog you can see an event log with the new number of licenses.