

## What is the URL to access the OPC UA server of Industrial HiVision 6.0 or higher?

- 2018-02-21 - Industrial HiVision

### **Industrial HiVision 6.0:**

URL: `opc.tcp://<IP-ADDRESS>:11161/OPCUA/HiVisionUaServer`

### **Industrial HiVision 7.0:**

**Industrial HiVision 07.0.00; 07.0.01; 07.0.02:**

URL: `opc.tcp://<IP-ADDRESS>:11167/OPCUA/HiVisionUaServer`

**Industrial HiVision 07.0.03 or later:**

URL: `opc.tcp://<IP-ADDRESS>:11168/OPCUA/HiVisionUaServer`

### **Industrial HiVision 7.1:**

URL: `opc.tcp://<IP-ADDRESS>:11175/OPCUA/HiVisionUaServer`