

Base de Conhecimentos > Products > HiOS > How to load a XML config file without changing the IP address and password of my device ?

How to load a XML config file without changing the IP address and password of my device ?

- 2024-08-05 - HiOS

If for support you need to load the XML config file of a customer in one of your device you may be interested not to load the customer IP address or the customer passwords in your device.

This document explains how to do it

Open the XML file with a Text Editor

😑 cor	nfig2.x	mi				
1		<pre>(?xml version="1.0" encoding="utf-8" ?></pre>				
2	Ę.	Config version="1.0">				
3	¢	<header></header>				
4		<variable name="productId">rsp25_11003z6tt</variable>				
5		<variable name="swMajorRelNum">2</variable>				
6		<variable name="swMinorRelNum">0</variable>				
7		<variable name="swBugfixRelNum">4</variable>				
8	-					
9	ŧ	<mibdata></mibdata>				
10	申	<mib name="SNMPv2-MIB"></mib>				
11	申.	<scalar name="system"></scalar>				
16	-					
17	Þ	<mib name="IF-MIB"></mib>				
18	- T-	<table name="ifEntry"></table>				
80	申.	<table name="ifXEntry"></table>				
154	-					
155	申	<mib name="MAU-MIB"></mib>				
156	þ	<table name="ifMauEntry"></table>				
157	申	<entry></entry>				
158		<attribute name="ifMauIfIndex">1</attribute>				
159		<attribute name="ifMauIndex">1</attribute>				
160		<attribute name="ifMauStatus">3</attribute>				
161		1.3.6.1.2.1.26.4.18				
162	1					
163	Ē	<entry></entry>				

Hint : Notepad ++ makes possible this view as a tree with the possibility to extend or reduce the branches clicking on the symbols [+] to exetnd or [-] to reduce

Not to load the IP address, delete the "HM2-NETCONFIG-MIB" section and delete it


1561 🖨	<entry></entry>					
1562	<attribute name="hm2AgentCosMapIntfTrustIntfIndex">28</attribute>					
1563	2					
1564 -		Rechercher		li i		
1565						

a second second	-		156		Rechercher Remplacer Rechercher dans les fich	hiers d'un dossier	Marquer	
15 2	``` MIB name="HN2-NETCONFIG-MIB"> ```	Recherche		Suivant				
1595 🖨				Servens				
1596 🖨			Compter					
1597	*							
1600			Rechercher dans le document actuel					
601			Annuler					
1603 -		2 Bouder						
1604 🛱	Mode normal	C Haut	à la perte du focus					
1606	``` cAttribute name="hm2SntpServerBreeder" ```		Bas	persistante				
607	C. Provensky undriverse (C)* compliant idnet i		-					
609	stVlanEntry">							
1612 🛱								
1613	1							
1/ With th searching tool of your Text Editor, search for "HM2-NETCONFIG-MIB"

- 2/ Reduce the branch clicking on [-] at the left of the line
- 3/ Delete the line (all the section will be deleted)

Note : It's not only the IP address settings which won't be loaded, it's all the settings related to the configuration of the management address (Mask, management VLAN ...)

Not to load the users settings, delete the "HM2-USERMGMT-MIB" section and delete it

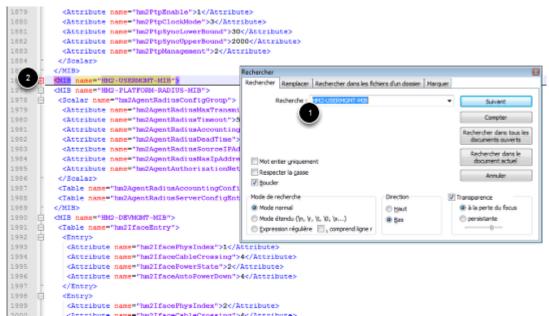

1/ With the searching tool of your Text Editor, search for "HM2-USERMGMT-MIB"

2/ Reduce the branch clicking on [-] at the left of the line

3/ Delete the line (all the section will be deleted)

Save the modified config file and load it on your device

If you try to load the config on a different hardware that the original device please refer to the article 15045-416 "Can I load a XML config file from a specific device to a different one ?"