

知识库 > Products > Industrial HiVision > HiMobile Connect

HiMobile Connect

- 2018-02-21 - Industrial HiVision

This lesson decribes how to connect HiMobile 2.0 to a Industrial HiVision Server as of v6.0. The first steps are preparing Industrial HiVision for remote access via the HiMobile APP. Then the needed settings for HiMobile on IOS are described.

Preparing IHV for app access



- To prepare IHV for App access:
- 1. open the **Preferences** dialog
- 2. go to Services

3. enable the webserver and remember the webserver port (default in IHV6.0 11159) make sure IHV Proxy Server - Allow Remote Access is set to true Enabling the webserver requires a restart of IHV.

Create Web Access Role

Basics	User Management
Discover Devices User Narrogement Event Forwarding Event Actions User defined Actions User defined Actions User defined Actions User defined Actions Userse Daylay Event Device Daylay Event Device Device Cons Device Icon Advenced Program Access Device Credentals Management Station Device,Port Names Device,Port Names Load/Save Isin NAT Devices Mobile Devices	Access Roles
	CK Apply Cancel Help

Open the preferences dialog again and go to User Management.

First of all make sure that you have a local superuser with permission to access the user management..

Create a a new access role for **web access**. If you tick just Web Access, Login is selected automatically.

Create User for Web Access



- 1. Click on Edit to modify the Local Users Configuration
- 2. Create a new user
- 3. Assign user to access role webaccess which you have created in the previous step

User Management Policy

Preferences					×	
Resics	User Management					
Discover Devices						
Event Erreardon	Access Roles					
- A Event Actions	Role Name A	Login Edit Mode	User Manag Web	Access	New	
User defined Actions	superuser	V V	V	7	Edit	
- Ucense	newould be				Delate	
Display					Desette	
- Canguage						
- 🗸 Device						
- 🐨 Status Colors						
Device Icon	Policies					
Advanced	Local Users: Edit					
	IDAD Caruari Edit					
	LOW SEVEL COL					
Management Station	RADIUS Server: Edit					
CPC-SIMP	Selectable Policies		Seler	cted Order		
- B External Applications	LDAP PADD IS		local	4		
Device.Port Names	KALLUS		P			
Load/Save						
- III 1:1 NAT Devices						
Mobile Devices					_	
					_	
				OK Apply Cancel	Help	

Specify the policy order for the user management.

In this example we specified a local user for web access that's why just local is in the selected order field.

Click on Ok to close the preferences dialog. A pop-up window appears to offer you to test the user managment configuration before activate it.

HiMobile



83 % 🗔

HiMobile





HiMobile is available in the App-Store. After installation open the HiMobile settings.

HiMobile Settings

●●●●○ Telekom.de 🗢 10:37	83 % 🗔			
Settings				
Ind. HiVision Host				
Web Server Port				
2 11159				
Username				
3 himobile				
Password				
4				
Use secure connection (HTTP	PS)			
←				

Configure the following parameters which needs to match to the settings made in Industrial HiVision:

- 1. Industrial HiVision host (IP address or hostname)
- 2. The web server port (default in IHV 6.0 11159)
- 3. Username with permission web access
- 4. Password
- 5. scroll down

Test the connection

●●●○ Telekom.de 🗢	12:00	87 % 💷 +				
Settings						
Username						
himobile						
Password						
S	Success					
Connection Test successfull PS)						
	Ok					
Demo Mo	ode					
Conr	nection	Test				
÷						

Test the connection to make sure all settings are correct and you are able to connect.