


Radius-Authentifizierung für den Management-Zugriff

- 2021-06-10 - Classic Firewalls

This lesson describes how to configure radius authentication for management access on EAGLE20/One

Configure Radius Server

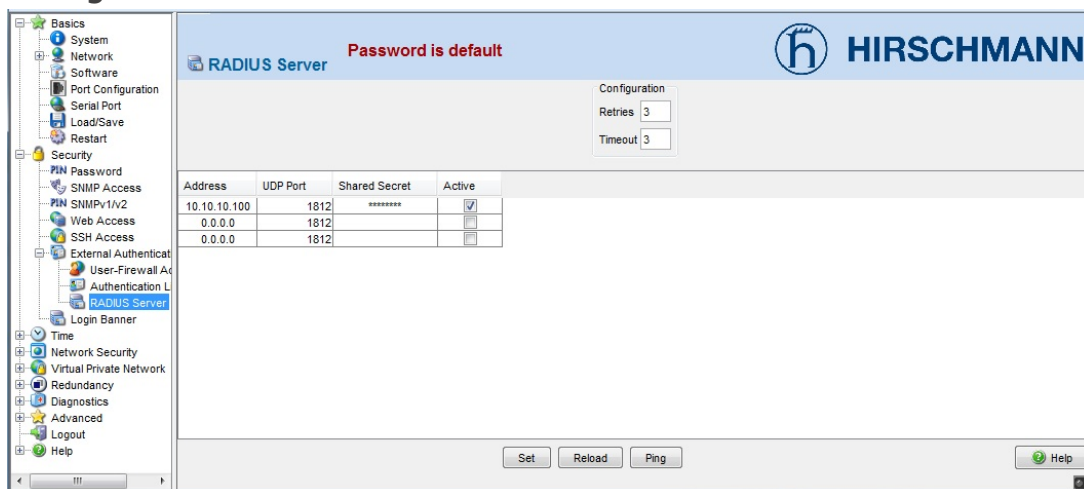


In the webinterface navigate to **Security -- External Authentication -- RADIUS Server** and specify the IP address, port and secret of the radius server

CLI command:

```
!(Hirschmann Eagle) (config)#radius server 1 modify ip-address <ip address> port 1812  
secret <shared secret>
```

```
!(Hirschmann Eagle) (config)#radius server 1 status enable
```

Configure Authentication list

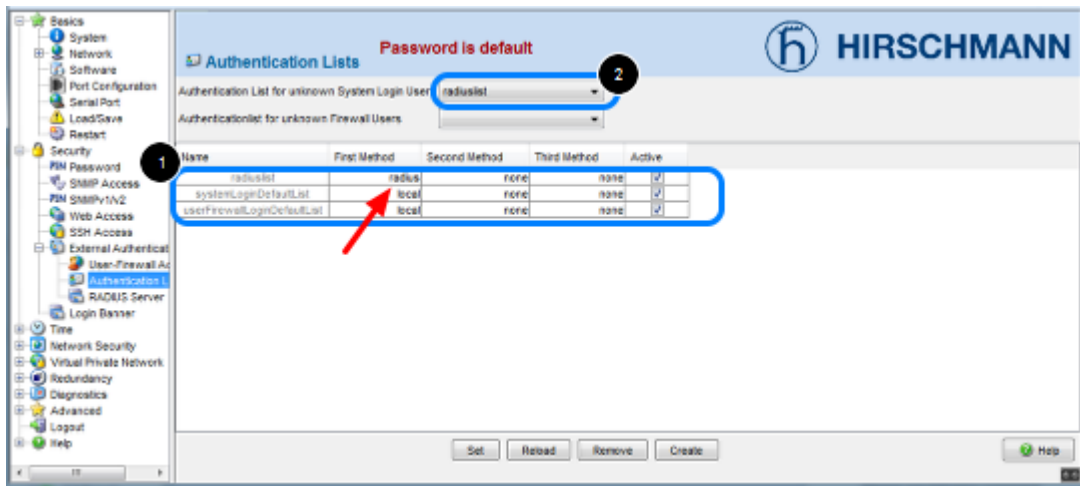

Navigate to **Security -- External Authentication -- Authentication List**


1. Create a new entry 'radiuslist' with first method 'radius'
2. Specify 'radiuslist' as authentication list for unknown system login users

CLI commands:

```

!(Hirschmann Eagle) (config)#authentication login radiuslist add
!(Hirschmann Eagle) (config)#authentication login radiuslist set radius
!(Hirschmann Eagle) (config)#authentication login radiuslist enable
!(Hirschmann Eagle) (config)#authentication login radiuslist default
  
```

SNMP over HTTPS

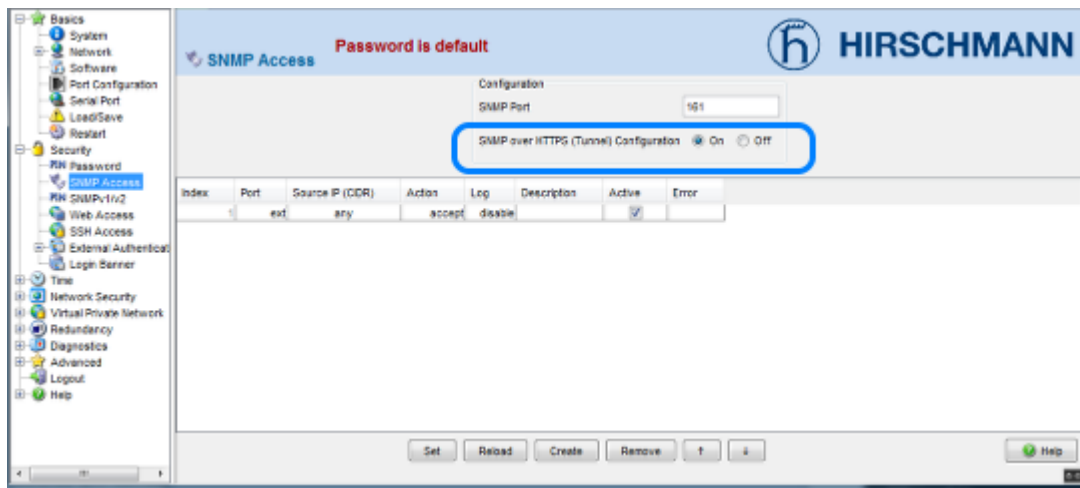

Enable SNMP over HTTPS otherwise radius authentication does not work for webinterface login.

Radius Server Configuration

Service-Types

e.g. freeradius server:

Service-Type = NAS-Prompt-User - Management Read-Only User

Service-Type = Administrative-User - Management Read-Write User

There is no access without valid service-type